

MAINTENANCE CHART

Interval: This interval should be judged by number of months or odometer reading, whichever comes first.

Item	Interval	months	2	12	24	36	48
		km	1000	6000	12000	18000	24000
		miles	600	4000	7500	11000	14500
Air cleaner element (🔧 6-21)		–	I	I	R	I	
* Exhaust pipe bolts and muffler bolts		T	–	T	–	T	
* Exhaust control valve		I	–	I	–	I	
* Valve clearance		–	–	–	–	I	
* Spark plugs		–	I	R	I	R	
Fuel hose (🔧 6-24)		–	I	I	I	I	
Engine oil (🔧 6-24)		R	R	R	R	R	
Engine oil filter (🔧 6-24)		R	–	–	R	–	
Throttle cable play (🔧 6-30)		I	I	I	I	I	
* PAIR (air supply) system		–	–	I	–	I	
* Throttle valve synchronization		–	–	I	–	I	
* Engine coolant (🔧 6-32)	“SUZUKI SUPER LONG LIFE COOLANT” (Blue)	Replace every 4 years or 48000 km (29000 miles)					
	“SUZUKI LONG LIFE COOLANT” (Green) or an engine coolant other than “SUZUKI SUPER LONG LIFE COOLANT” (Blue)	–	–	R	–	R	
Radiator hose (🔧 6-33)		–	I	I	I	I	
Clutch cable play (🔧 6-31)		–	I	I	I	I	
Drive chain (🔧 6-34)		I	I	I	I	I	
		Clean and lubricate every 1000 km (600 miles)					
* Brakes (🔧 6-38)		I	I	I	I	I	
Brake fluid (🔧 6-38)		–	I	I	I	I	
		*Replace every 2 years					
Brake hose (🔧 6-38)		–	I	I	I	I	
		*Replace every 4 years					
Tires (🔧 6-42)		–	I	I	I	I	
* Steering		I	–	I	–	I	
* Front forks (🔧 2-38)		–	–	I	–	I	
* Rear suspension (🔧 2-41)		–	–	I	–	I	
* Chassis bolts and nuts		T	T	T	T	T	
Lubrication (🔧 6-18)		Lubricate every 1000 km (600 miles)					

NOTE: I= Inspect and clean, adjust, replace or lubricate as necessary, R= Replace, T= Tighten

For Europe and Oceania countries

Item		Interval		2	12	24	36	48
		months		1000	12000	24000	36000	48000
		km	miles	600	7500	15000	22500	30000
Air cleaner element (🔧 6-21)				–			R	
* Exhaust pipe bolts and muffler bolts				T	T	T	T	T
* Exhaust control valve					–		–	
* Valve clearance				Inspect every 24000 km (15000 miles)				
* Spark plugs				–	R	R	R	R
Fuel hose (🔧 6-24)				–				
Engine oil (🔧 6-24)				R	R	R	R	R
Engine oil filter (🔧 6-24)				R	–	R	–	R
Throttle cable play (🔧 6-30)								
* PAIR (air supply) system				–	–		–	
* Throttle valve synchronization				–				
* Engine coolant (🔧 6-32)	“SUZUKI SUPER LONG LIFE COOLANT” (Blue)			–	–	–	–	R
	“SUZUKI LONG LIFE COOLANT” (Green) or an engine coolant other than “SUZUKI SUPER LONG LIFE COOLANT” (Blue)			–	–	R	–	R
Radiator hose (🔧 6-33)				–				
Clutch cable play (🔧 6-31)				–				
Drive chain (🔧 6-34)								
				Clean and lubricate every 1000 km (600 miles)				
* Brakes (🔧 6-38)								
Brake fluid (🔧 6-38)				Inspect every year or 6000 km (4000 miles) * Replace every 2 years				
Brake hose (🔧 6-38)				–				
				*Replace every 4 years				
Tires (🔧 6-42)				–				
* Steering								
* Front forks (🔧 2-38)				–				
* Rear suspension (🔧 2-41)				–				
* Chassis bolts and nuts				T	T	T	T	T
Lubrication (🔧 6-18)				Lubricate every 1000 km (600 miles)				

NOTE: | and Inspect= Inspect and clean, adjust, replace or lubricate as necessary; R= Replace; T= Tighten